

DATASHEET 100-103 Torpedo Anti-skate Stud 20mm

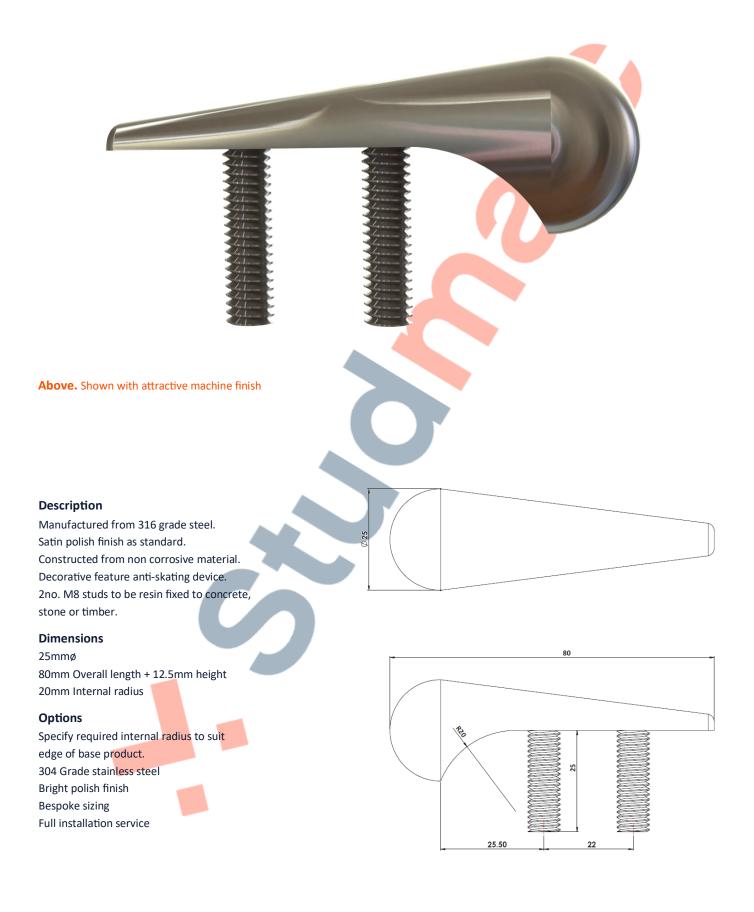



DATASHEET 100-103 Torpedo Anti-skate Stud 20mm

Installation

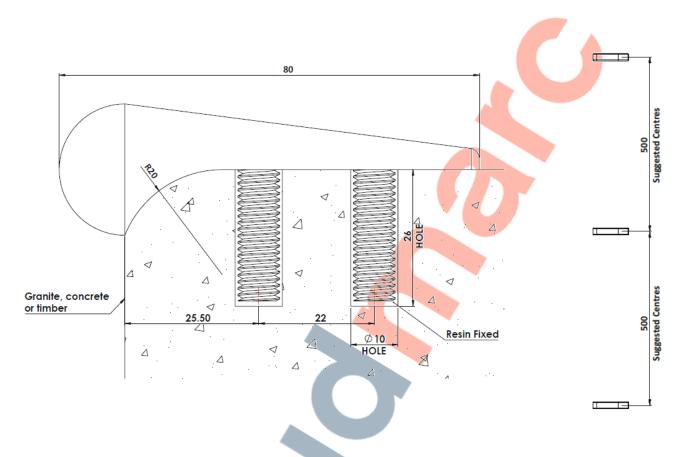

Installation

- 1. Drill 2no. holes 10mm in diameter to the depths shown above.
- 2. Remove dust and debris caused by drilling.
- 3. Following the product guidelines heat the Polymer Modified Adhesive and pour a sufficient amount to fill the drilled hole.
- 4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
- 5. Allow a few minutes for the Polymer Modified Adhesive to set.

Cleaning & Maintenance

This product is designed for all weather exposure requiring only minimal maintenance as detailed below.

<u>Stainless Steel</u>: Manufactured from premium grade stainless steel. Maintenance free, inspect fixing every 6 months. Add additional Adhesive where required.



DATASHEET 100-103 Torpedo Anti-skate Stud 20mm

