

102-102 Anti-Skate Blade Retro Fit

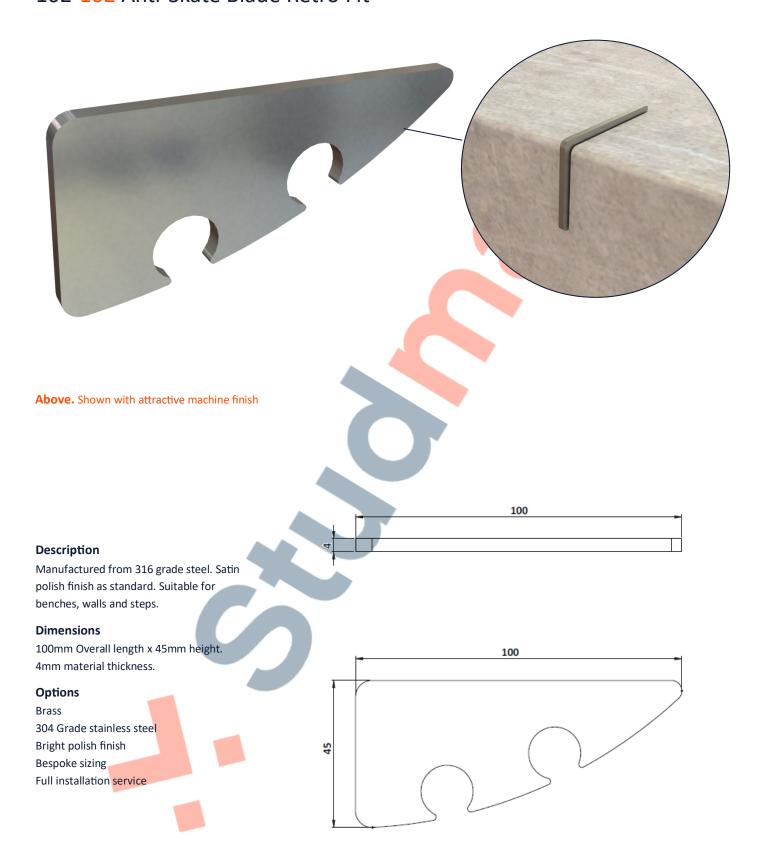




102-102 Anti-Skate Blade Installation

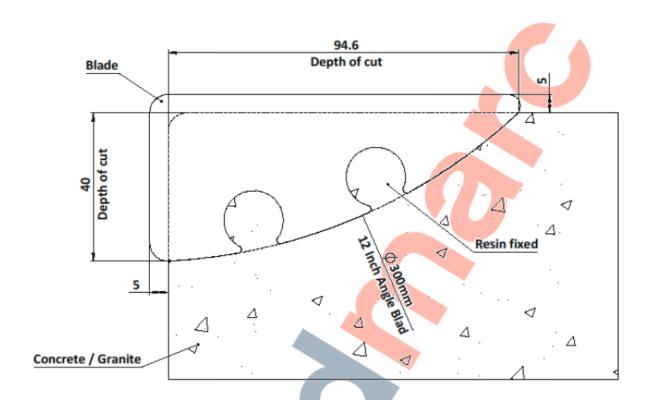

Installation

- 1. Use a 12inch angle grinder to form a slot
- 2. Remove dust and debris caused by drilling.
- 3. If using ready mixed polyester resin apply a sufficient amount to half fill the slot, so the hole is completely filled once the blade is inserted.
- 4. Push the blade into the slot firmly ensuring an edge seal around the entire blade.
- 5. Allow a few minutes for the resin to set

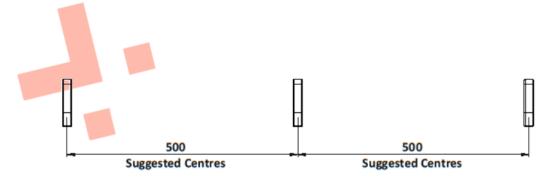



102-102 Anti-Skate Blade Retro Fit



