
# DATASHEET 200-106 Chamfered Stud 90mm





## DATASHEET 200-106 Chamfered Stud 90mm

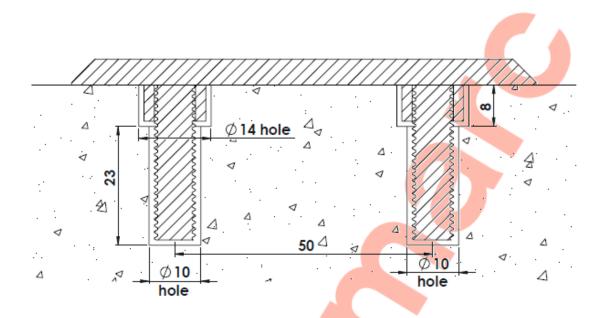


### Installation

- 1. Drill holes 2no. 10mm in diameter to the depths shown above.
- 2. Drill holes 2no. M14 in diameter to the depths shown above.
- 3. Remove dust and debris caused by drilling.
- 4. Following the product guidelines heat the Polymer Modified Adhesive and pour a sufficient amount to fill the drilled hole.
- 5. Push the stud into the hole firmly ensuring an edge seal around the entire stud
- 6. Allow a few minutes for the Polymer Modified Adhesive to set.

#### **Cleaning & Maintenance**

This product is designed for all weather exposure requiring only minimal maintenance as detailed below.

<u>Stainless Steel</u>: Manufactured from premium Stainless Steel. Maintenance free, inspect fixing every 6 months. Add additional adhesive where required.

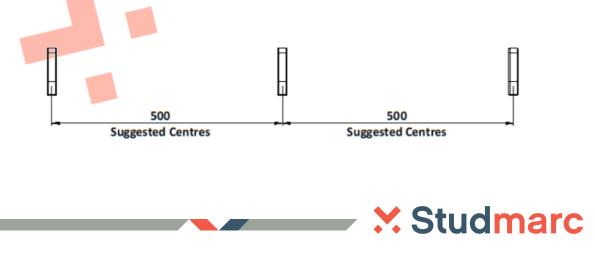

### DATASHEET 200-106 Chamfered Stud 90mm



