

DATASHEET Brass BL1 Tactile Stud 25mm

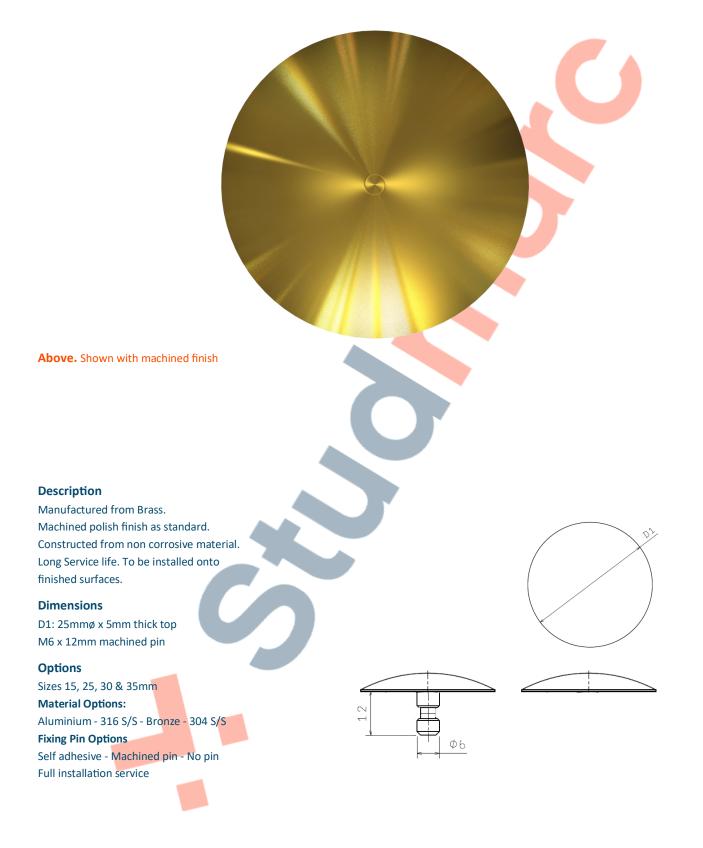

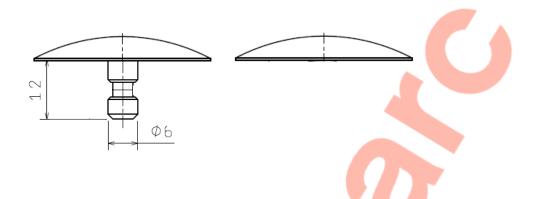

DATASHEET Brass BL1 Tactile Stud 25mm Installation



Installation Machined Pin

1. Drill holes 7mm dia x 13mm depth.

2. Remove dust and debris caused by drilling.

3. Following the product guidelines, screw the nozzle on, and press the trigger - the two part resin will mix in the nozzle. Pour a sufficient amount to fill the drilled hole.

4. Push the stud into the hole firmly ensuring an edge seal around the entire stud

5. Allow a few minutes for the Polymer Modified Adhesive to set.

Installation Self Adhesive

1. Prep area where stud is to be situated by using a grease and dirt remover, i.e white spirits. Then let dry thoroughly.

2. Once area is dried, peel backing to stud off and press down firmly.


Note: We highly recommend only using the self-adhesive studs on tiled floors.

For layout suggestions please refer to the below.

https://www.studmarc.com/knowledge-base/how-far-apart-should-tactile-studs-be-installed-from-each-other/



DATASHEET Brass BL1 Tactile Stud 25mm

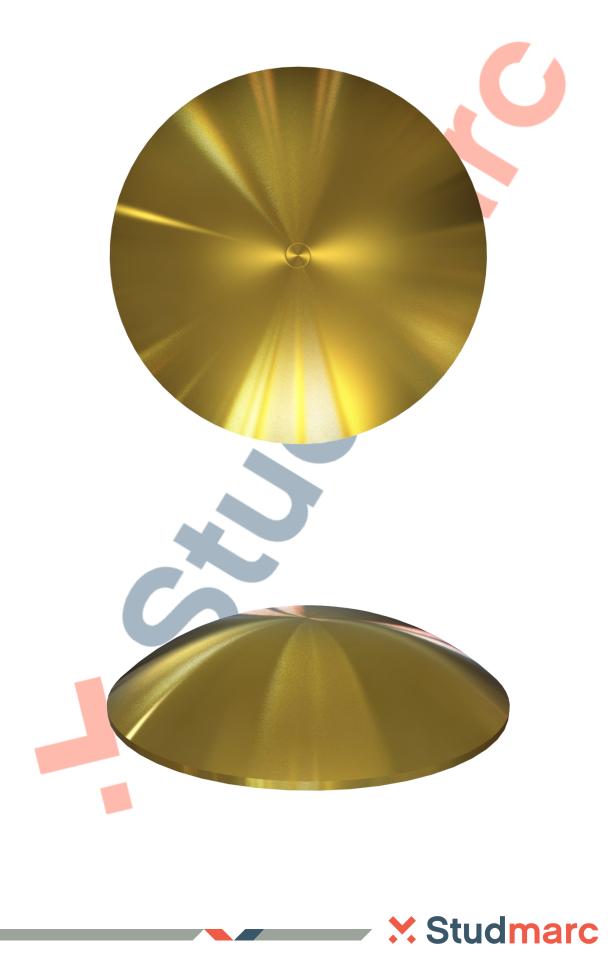

T: 01686 807 450 Trefeglwys Road, Caersws, Powys, SY17 5HH