# DATASHEET SS 316L Groove Corduroy Warning Strip SR1 400mm

Above. Shown in machined finish

#### Description

Manufactured from 316L Stainless Steel. Machined polish finish as standard. Strips provide an underfoot warning to identify hazards and dangerous areas where is a change in levels. Surface of strip to have etched grooves for additional grip.

#### **Dimensions Available**

Width: 35mm

Length: 400mm

Height: 5mm


#### Options

Alternative sizing Fixing Options: With/without fixing pin - Self -adhesive - Screw hole - Pressed pin Available with either a round or square end

4 Colour options

Brass - Bronze - Aluminium

Full installation service




400.00





Trefeglwys Road, Caersws, Powys, SY17 5HH

### SS 316L Groove Corduroy Warning Strip SR1 400mm - Installation

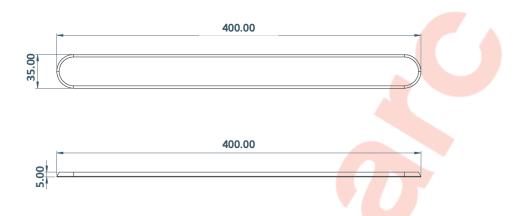

#### **Installation Welded Pin**

- 1. Drill holes 7mm dia x 16mm depth.
- 2. Remove dust and debris caused by drilling.

3. Following the product guidelines, screw the nozzle on, and press the trigger - the two part resin will mix in the nozzle. Pour a sufficient amount to fill the drilled hole.

- 4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
- 5. Allow a few minutes for the Polymer Modified Adhesive to set.

#### **Installation Machined Pin**

- 1. Drill holes 7mm dia x 13mm depth.
- 2. Remove dust and debris caused by drilling.

3. Following the product guidelines, screw the nozzle on, and press the trigger - the two part resin will mix in the nozzle. Pour a sufficient amount to fill the drilled hole.

- 4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
- 5. Allow a few minutes for the Polymer Modified Adhesive to set.

#### **Installation Self Adhesive**

- 1. Prep area where stud is to be situated by using a grease and dirt remover, i.e white spirits. Then let dry thoroughly.
- 2. Once area is dried, peel backing to stud off and press down firmly.

Note: We highly recommend only using the self-adhesive studs on tiled floors.

#### For layout suggestions please refer to the below.

https://www.studmarc.com/knowledge-base/how-far-apart-should-tactile-studs-be-installed-from-each-other/



## DATASHEET SS 316L Groove Corduroy Warning Strip SR1 400mm

