

## DATASHEET 102-102 Anti-Skate Blade, Retro-Fit

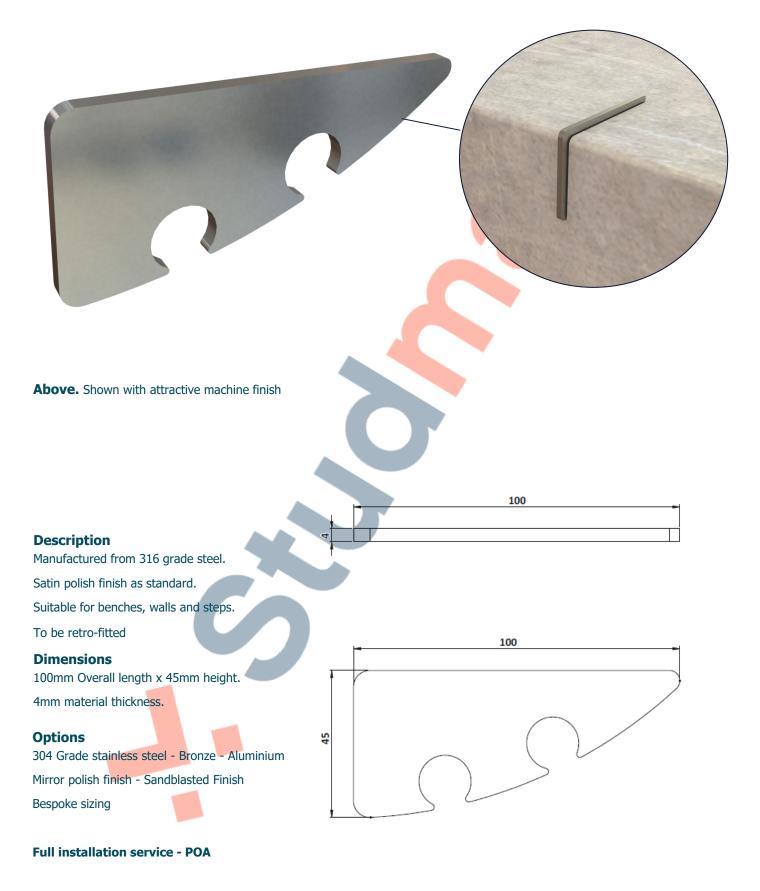




Trefeglwys Road, Caersws, Powys, SY17 5HH

## DATASHEET 102-102 Anti-Skate Blade Installation

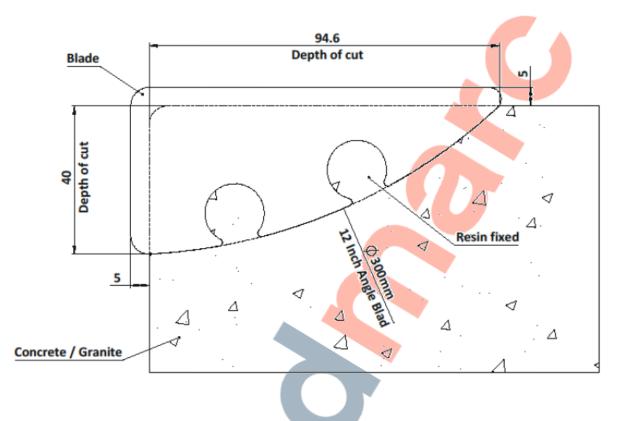

## Installation

- 1. Use a 12inch angle grinder to form a slot
- 2. Remove dust and debris caused by drilling.
- 3. Following the product guidelines, found on the Resin tube, pour a sufficient amount to half fill the slot, so the hole is completely filled once the blade is inserted.
- 4. Push the blade into the slot firmly ensuring an edge seal around the entire blade.
- 5. Allow a few minutes for the resin to set

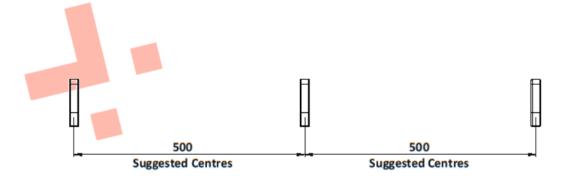



## DATASHEET 102-102 Anti-Skate Blade, Retro-Fit

