


## DATASHEET

### Bronze Corduroy Warning Strip with Anti-Slip Insert 400mm

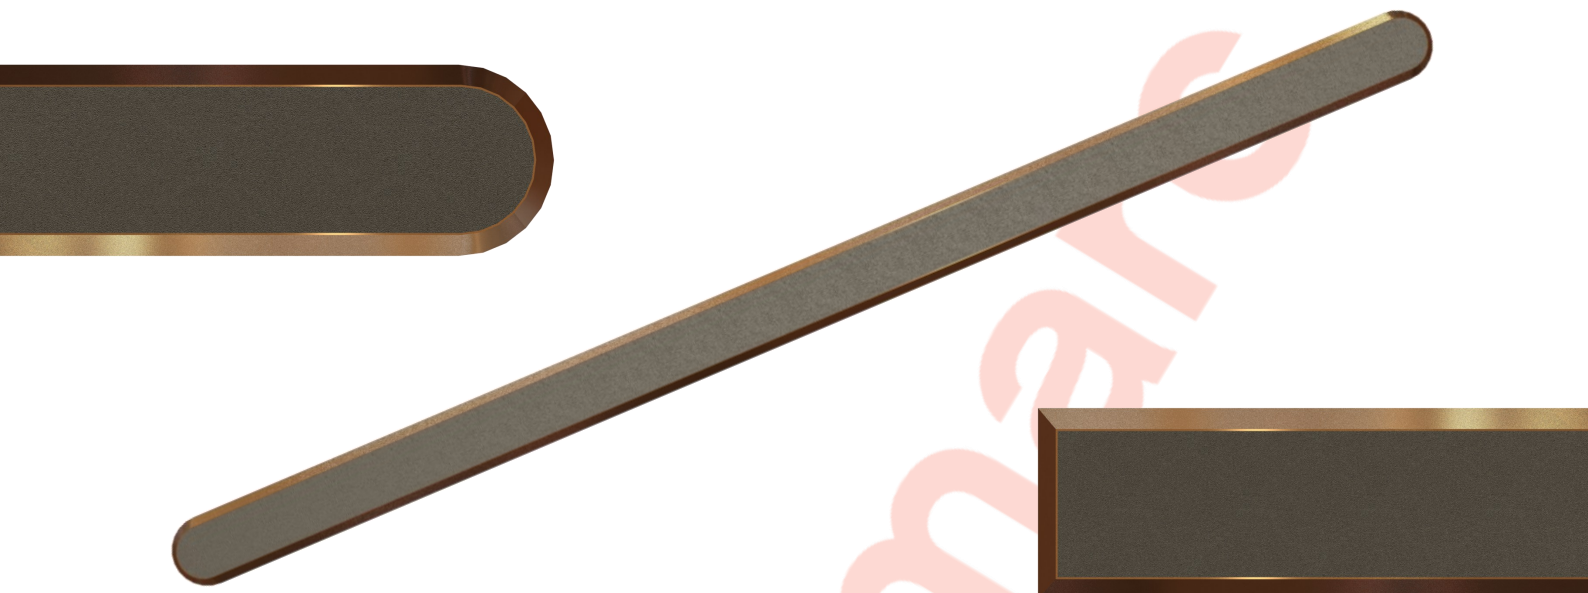

**Above.** Shown in machined finish with black insert

#### Description

Manufactured from Bronze.

Machined polish finish as standard. Strips provide an underfoot warning to identify hazards and dangerous areas where is a change in levels. Surface of strip to have anti slip textured insert.

#### Dimensions Available

Width: 35mm

Length: 400mm

Height: 5mm

#### Options

Alternative sizing


Fixing Options: With/without fixing pin - Self  
-adhesive - Screw hole - Pressed pin

Available with either a round or square end


4 Colour options

316L S/S - Brass - 304 S/S

Full installation service

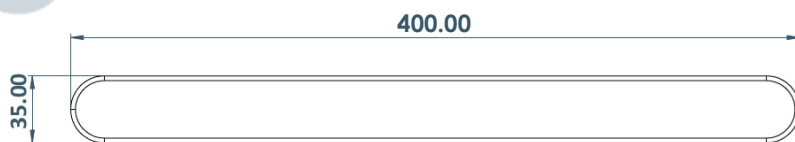

## Bronze Corduroy Warning Strip with Anti-Slip Insert 400mm - Installation

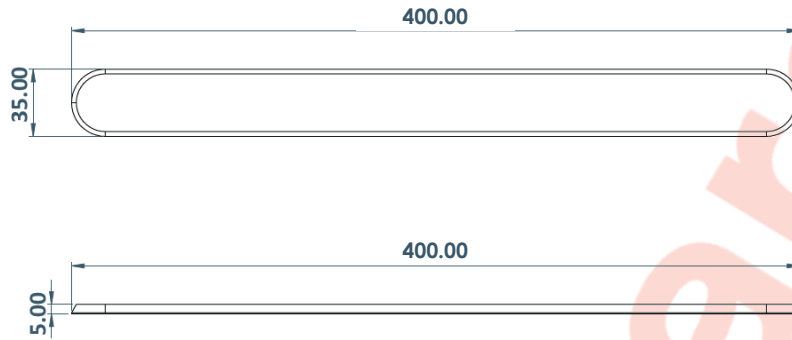

### Installation Welded Pin

1. Drill holes 7mm dia x 16mm depth.
2. Remove dust and debris caused by drilling.
3. Following the product guidelines, screw the nozzle on, and press the trigger - the two part resin will mix in the nozzle. Pour a sufficient amount to fill the drilled hole.
4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
5. Allow a few minutes for the Polymer Modified Adhesive to set.

### Installation Machined Pin

1. Drill holes 7mm dia x 13mm depth.
2. Remove dust and debris caused by drilling.
3. Following the product guidelines, screw the nozzle on, and press the trigger - the two part resin will mix in the nozzle. Pour a sufficient amount to fill the drilled hole.
4. Push the stud into the hole firmly ensuring an edge seal around the entire stud
5. Allow a few minutes for the Polymer Modified Adhesive to set.

### Installation Self Adhesive

1. Prep area where stud is to be situated by using a grease and dirt remover, i.e white spirits. Then let dry thoroughly.
2. Once area is dried, peel backing to stud off and press down firmly.

Note: We highly recommend only using the self-adhesive studs on tiled floors.

For layout suggestions please refer to the below.

<https://www.studmarc.com/knowledge-base/how-far-apart-should-tactile-studs-be-installed-from-each-other/>

DATASHEET

**Bronze** Corduroy Warning Strip with Anti-Slip Insert 400mm

